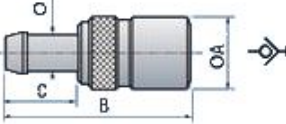 
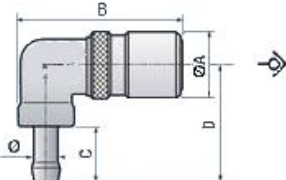 
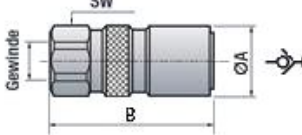 
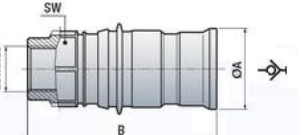 
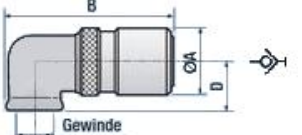 
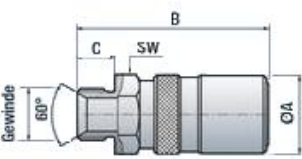 
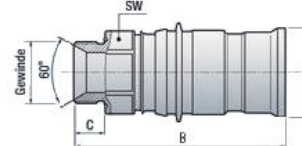 


Gniazda HMI

Z ZAWORAMI

| | WYMIARY [mm] | | | | | NR. CZĘŚCI | |
|--|--------------|----|-------|----|----|----------------------|----------------------|
| | Ø (WAŻ) | ØA | B | C | D | | |
| GNIAZDO Z ZAWOREM, PROSTE, WAŻ MOCOWANY OPASKOWO  | 8 | 19 | 60 | 23 | | HMI 061808V | |
| | 12 | 25 | 69,5 | 28 | | HMI 091812V | |
| | 16 | 31 | 82 | 28 | | HMI 121816V | |
| GNIAZDO Z ZAWOREM, KĄT 90°, WAŻ MOCOWANY OPASKOWO  | 8 | 19 | 59 | 23 | 40 | HMI 061808V90 | |
| | 10 | 25 | 65 | 23 | 47 | HMI 091810V90 | |
| | 12 | 25 | 65 | 28 | 55 | HMI 091812V90 | |
| | WYMIARY [mm] | | | | | | NR. CZĘŚCI |
| | F | ØA | B | C | D | H | |
| GNIAZDO Z ZAWOREM, PROSTE, MOCOWANIE Z GWINTEM WEW.  | 1/4 | 19 | 46 | | | 17 | HMI 061101V |
| | 3/8 | 25 | 53 | | | 22 | HMI 091102V |
| | 1/2 | 31 | 67 | | | 27 | HMI 121103V |
|  | 3/4 | 53 | 119,5 | | | 42 | HMI 201104CLV |
| | 1 | 53 | 119,5 | | | 42 | HMI 201105CLV |
| | 1 | 60 | 140 | | | 50 | HMI 251105CLV |
| GNIAZDO Z ZAWOREM, KĄT 90°, MOCOWANIE Z GWINTEM WEW.  | 1/4 | 19 | 59 | | 15 | | HMI 061101V90 |
| | 3/8 | 25 | 65 | | 20 | | HMI 091102V90 |
| | 1/2 | 31 | 82 | | 25 | | HMI 121103V90 |
| GNIAZDO Z ZAWOREM, PROSTE, MOCOWANIE Z GWINTEM ZEW.  | 1/4 | 19 | 55 | 12 | | 17 | HMI 061151V |
| | 3/8 | 25 | 61 | 12 | | 22 | HMI 091152V |
| | 1/2 | 31 | 72 | 14 | | 27 | HMI 121153V |
|  | 1 | 53 | 132 | 20 | | 42 | HMI 201155CLV |
| | 1 1/4 | 60 | 144 | 21 | | 50 | HMI 251156CLV |

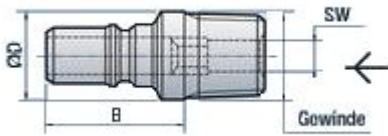 
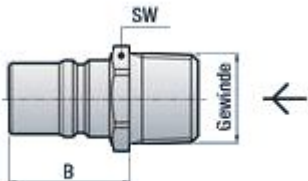 
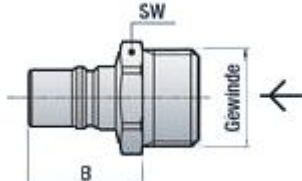 
HP SYSTEMS POLSKA SP. Z O.O.

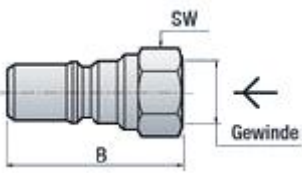 
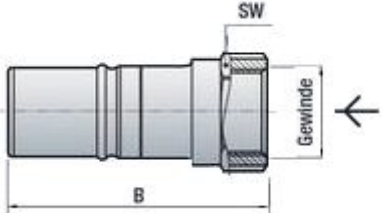 
Ul. J. Styki 18/10, 03-928 Warszawa Tel.: 022 215 88 77 Fax: 022 498 64 65 Email: hps@hps-polska.pl

www.hps-polska.pl

Wtyki HMI

PRZEPŁYW SWOBODNY

| | WYMIARY [mm] | | | | NR. CZĘŚCI |
|---|--------------|----|----|----|-------------------|
| | ØF | B | ØD | H | |
| WTYK PROSTY, PRZEPŁYW SWOBODNY, MOCOWANIE GWINT ZEW.  | 1/8 | 21 | 10 | 5 | HMI 066160 |
| | 1/4 | 22 | 14 | 5 | HMI 066161 |
| | 1/4 | 21 | 14 | 8 | HMI 096161 |
| | 3/8 | 23 | 17 | 8 | HMI 096162 |
| | 3/8 | 26 | 18 | 10 | HMI 126162 |
|  | 1/2 | 28 | | 22 | HMI 126163 |
|  | 1/2 | 25 | | 22 | HMI 096153 |
| | 3/4 | 30 | | 27 | HMI 126154 |

| | WYMIARY [mm] | | | NR. CZĘŚCI |
|---|--------------|-----|----|---------------------|
| | ØF | B | H | |
| WTYK PROSTY, PRZEPŁYW SWOBODNY, MOCOWANIE GWINT WEW.  | 1/4 | 34 | 17 | HMI 066101 |
| | 3/8 | 37 | 22 | HMI 096102 |
| | 1/2 | 45 | 27 | HMI 126103 |
|  | 1 | 92 | 41 | HMI 206105CL |
| | 1 | 100 | 41 | HMI 256105CL |

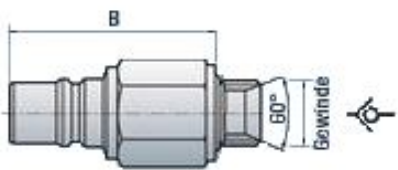 
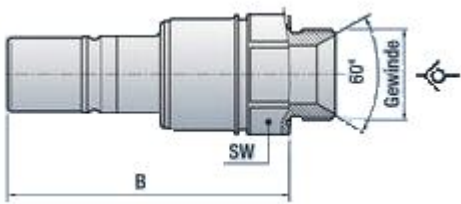 
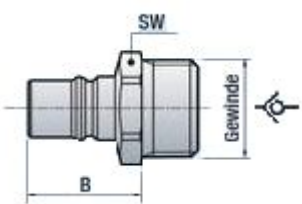 
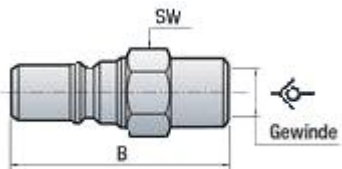 
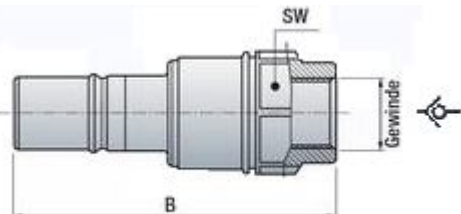 
HP SYSTEMS POLSKA SP. Z O.O.

Ul. J. Styki 18/10, 03-928 Warszawa Tel.: 022 215 88 77 Fax: 022 498 64 65 Email: hps@hps-polska.pl

www.hps-polska.pl

Wtyki HMI

Z ZAWORAMI

| | WYMIARY [mm] | | | NR. CZĘŚCI |
|---|--------------|-------|----|---------------|
| | ØF | B | H | |
| WTYK PROSTY, Z ZAWOREM, MOCOWANIE GWINT ZEW.  | 1/8 | 38 | 17 | HMI 067150V |
| | 1/4 | 36 | 17 | HMI 067151V |
| | 1/4 | 42 | 19 | HMI 097151V |
| | 3/8 | 38 | 20 | HMI 097152V |
| | 3/8 | 53,5 | 24 | HMI 127152V |
| | 1/2 | 50 | 24 | HMI 127153V |
|  | 1 | 120 | 42 | HMI 207155CLV |
| | 1 ¼ | 132 | 50 | HMI 257156CLV |
|  | 1/2 | 25 | 22 | HMI 097153V |
| | 3/4 | 30 | 27 | HMI 127154V |
| WTYK PROSTY, Z ZAWOREM, MOCOWANIE GWINT WEW.  | 1/4 | 48,5 | 19 | HMI 097101V |
| | 3/8 | 49 | 22 | HMI 097102V |
|  | 3/4 | 126,5 | 42 | HMI 207104CLV |
| | 1 | 126,5 | 42 | HMI 207105CLV |
| | 1 | 148,5 | 50 | HMI 257105CLV |

HP SYSTEMS POLSKA SP. Z O.O.

Ul. J. Styki 18/10, 03-928 Warszawa Tel.: 022 215 88 77 Fax: 022 498 64 65 Email: hps@hps-polska.pl

www.hps-polska.pl